

# DENON AVR control protocol

Ver.03

Application model : AVR-4520CI/AVR-4520

Application terminal: Ethernet  
RS-232C

Rev 8.1.0

## Connector specification

### I. RS-232C

Connector type: DB-9pin female type, slave straight connection (DCE type)

( 1pin : GND , 2pin : TxD , 3pin : RxD , 5pin : Common(GND) , 4,6,7,8,9pin : NC )

Communication format:

Synchronous system : Tone step synchronization  
Communication system : A half duplex  
Communication speed : 9600bps


Character length : 8 bits  
Parity control : None  
Start bit : 1 bit  
Stop bit : 1 bit  
Communication procedure : Non procedural  
Communication data length : 135 bytes (maximum)

Version	Date	Contents	Page
01	19.July.'12	Original	
02	25.April.'13	Corrected SIMPLAY command	P8,P33
03	21.May.'13	Corrected Tuner/HD Radio preset channel command TPAN**, TPANMEM**, TPHD**, TPHDMEM** (** is replaced from "A1~G8" to "01~56")	P26,P27 P49,P50


## II. Ethernet

Connector type : RJ-45 (10BASE-T/100BASE-TX)

Example ①

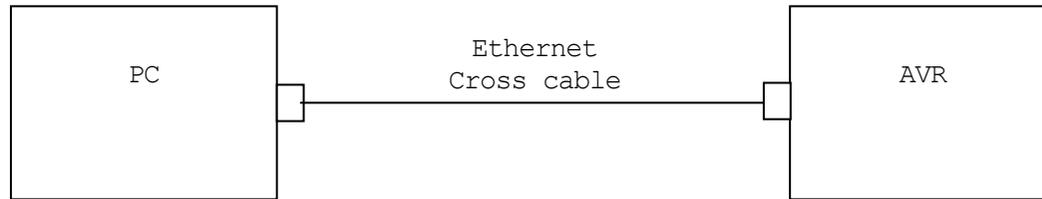

Example ②

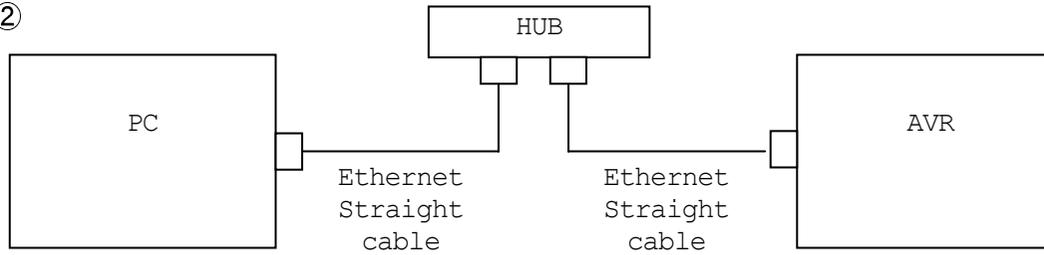

Communication format :

Communication system : A half duplex  
Communication speed : 10Mbps/100Mbps  
Communication port : TCP port 23 (telnet)  
Communication data length : 135bytes (maximum)

## NETWORK SETUP of AVR-4520CI/AVR-4520

### >Procedure of Network Setup mode.

(1) Press SETUP MENU button, then Menu appears on FL-display (and GUI)

(2) Select "Setup Menu > Network > Settings " .

(3) Set parameters described below.

<DHCP> "On"---Use this setting when DHCP server is on the local network.  
"Off"---Use this setting when DHCP server is not on the local network.

<IP Address> When <DHCP> sets "Off", please set IP address.  
When <DHCP> sets "On", you can confirm the IP address that is set by server.

<Subnet Mask> When <DHCP> sets "Off", please set Subnet Mask.  
When <DHCP> sets "On", you can confirm the Subnet Mask that is set by server.

<Gateway> Set the address of Gateway when Gateway is on the local network.  
Do not set this parameter when Gateway is not on the local network.

<Primary DNS> Do not set this parameter.

<Second DNS> Do not set this parameter.

<Proxy> Set this parameter "Off".

<Network Option: IP Control>

(1) Press SETUP MENU button, then Menu appears on FL-display (and GUI)

(2) Select "Setup Menu > Network > Network"

(3) Set parameters described below.

"Always On"---Use this setting when using the AVR-4520CI/AVR-4520 Connected in a network.

"Off In Standby"--- Use this setting when not using the AVR-4520CI/AVR-4520 connected in a network.

This setting is reducing the power consumption in the standby mode.

## Protocol specification

The following three data forms are defined.

- COMMAND** : The message sent to a system(AVR) from a controller(Touch Panel etc.)  
A command to a system is given from a controller.
- EVENT** : The message sent to a controller (Touch Panel etc.) from a system (AVR)  
The result is sent, when a system is operated directly and a state changes.  
\*The form of **EVENT** presupposes that it is the same as that of **COMMAND**.  
\*\*Refer to the following table for the contents of **COMMAND** and **EVENT**.
- RESPONSE** : The message sent to a controller (Touch Panel etc.) from a system (AVR)  
if the 'request command' (**COMMAND**+?  
CR(0x0D)) has come from a controller.  
The **RESPONSE** should be sent within 200ms of receiving the **COMMAND**.  
\*The form of **RESPONSE** presupposes that it is the same as that of **EVENT**.

**Basic specification:** The command by ASCII CODE, parameter expression

\*ASCII CODE which can be used is from 0x20 to 0x7F: the alphabet and the number of 0-9, and space (0x20), some signs,  
AND carriage return (0x0D) --- It is used only as a pause sign.

**Command structure:** COMMAND + PARAMETER + CR (0x0D)

COMMAND: ASCII CODE of 2 characters

Ex.           SI : Select Input source  
              MS : surround Mode Setting  
              MV : Master Volume setting  
              PW : system PoWer setting

PARAMETER : ASCII CODE ( up to 25 characters)

ex.           DVD : function name

              SUPER STADIUM : surround mode name

\*Special Parameter--- ? : for request command

**The example of a command** \* <CR> is the meaning of 0x0D.

SIDVD<CR> : Select Input source DVD

MSSTEREO<CR> : surround Mode Set to STEREO

MVUP<CR> : Master Volume UP

PWON<CR> : system PoWer ON

PWSTANDBY<CR> : system PoWer STANDBY

SI?<CR> : Request command for now playing input source >> Return **RESPONSE** `SI\*\*\*<CR>`

## Others

- A) **COMMAND** is receivable also during transmission of **EVENT**.
- B) Since CHANNEL VOLUME changes simultaneously when the SURROUND MODE changes, the value of the channel volume of all channels returns as **EVENT**.
- C) CHANNEL VOLUME returns the data of ALL channels by the present SURROUND MODE also including an intact channel. In this case, the data of an intact channel is set to "50".
- D) Since SURROUND MODE changes simultaneously when the INPUT source changes, the SURROUND MODE (and also the value of the channel volume of all channels , It described in B) ) returns as **EVENT**.
- E) When SURROUND MODE is the same in between INPUT source change before and after, **EVENT** of SURROUND MODE and CHANNEL VOLUME does NOT return.
- F) Although **EVENT** of SURROUND MODE returns when the present SURROUND MODE is set up again, CHANNEL VOLUME does NOT return.
- G) When SURROUND MODE is changed, before returning SURROUND MODE after change as **EVENT**, the present SURROUND MODE is returned.
- H) The **RESPONSE** should be sent as opposed to the request command by all the commands with which an **EVENT** exists , not need to the another request commands (ex. SV command).
- I) The **PARAMETER** (with **COMMAND** and **RESPONSE, EVENT**) of minimum level of MASTER VOLUME defines "00".
- J) If the MASTER VOLUME & CHANNEL VOLUME set with 0.5dB step, the **PARAMETER** (with **COMMAND** and **RESPONSE, EVENT**) defines three ASCII characters as bellows.

```
Ex.  MASTER VOLUME =  +18.0dB :  MV98<CR>
                        |          |
                        +1.0dB :  MV81<CR>
                        +0.5dB :  MV805<CR>
                        0dB :     MV80<CR>
                        -0.5dB :  MV795<CR>
                        -1.0dB :  MV79<CR>
                        |          |
                        -79.5dB :  MV005<CR>
                        --- :     MV00<CR>
```

\* At the \*\*.0dB step, only uses two ASCII characters as **PARAMETER**, same as usual.

- K) 1 seconds later, please transmit the next **COMMAND** after transmitting a power on **COMMAND** (PWON) .

## COMMAND and PARAMETER list

COMMAND	PARAMETER	function	example
PW	ON	POWER ON/STANDBY change	PWON<CR>
	STANDBY		PWSTANDBY<CR>
	?	Return PW Status	PW?<CR>
MV	UP	MASTER VOLUME UP/DOWN , direct change to **(**dB)	MVUP<CR>
	DOWN		MVDOWN<CR>
	**	**: <b>00 to 98</b> by ASCII , 80=80(0dB), 00=-0(--dB) (MIN)	MV80<CR>
	?	Return MV Status	MV?<CR>
CV	FL UP	CHANNEL VOLUME UP/DOWN , direct change to **dB	CVFL UP<CR>
	FL DOWN	---FRONT Lch	CVFL DOWN<CR>
	FL **	**: <b>38 to 62</b> by ASCII , 50=0dB	CVFL 50<CR>
	FR UP		CVFR UP<CR>
	FR DOWN	---FRONT Rch	CVFR DOWN<CR>
	FR **	**: <b>38 to 62</b> by ASCII , 50=0dB	CVFR 50<CR>
	C UP		CVC UP<CR>
	C DOWN	---CENTERch	CVC DOWN<CR>
	C **	**: <b>38 to 62</b> by ASCII , 50=0dB	CVC 50<CR>
	SW UP		CVSW UP<CR>
	SW DOWN	---SUBWOOFERch	CVSW DOWN<CR>
	SW **	**: <b>38 to 62</b> by ASCII , 50=0dB,00=OFF	CVSW 50<CR>
	<b>SW2 UP</b>		<b>CVSW UP&lt;CR&gt;</b>
	<b>SW2 DOWN</b>	---SUBWOOFER2ch	<b>CVSW DOWN&lt;CR&gt;</b>
	<b>SW2 **</b>	**: <b>38 to 62</b> by ASCII , 50=0dB,00=OFF	<b>CVSW 50&lt;CR&gt;</b>
	SL UP		CVSL UP<CR>
	SL DOWN	---SURROUND Lch	CVSL DOWN<CR>
	SL **	**: <b>38 to 62</b> by ASCII , 50=0dB	CVSL 50<CR>
	SR UP		CVSR UP<CR>
	SR DOWN	---SURROUND Rch	CVSR DOWN<CR>
	SR **	**: <b>38 to 62</b> by ASCII , 50=0dB	CVSR 50<CR>
	SBL UP	---SURROUND BACK Lch (SBch 2SP)	CVSBL UP<CR>
SBL DOWN		CVSBL DOWN<CR>	
SBL **	**: <b>38 to 62</b> by ASCII , 50=0dB	CVSBL 50<CR>	

MV, CV **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

COMMAND	PARAMETER	function	example
CV	SBR UP	---SURROUND BACK Rch (SBch 2SP)	CVSBR UP<CR>
	SBR DOWN		CVSBR DOWN<CR>
	SBR **	** :38 to 62 by ASCII , 50=0dB	CVSBR 50<CR>
	SB UP	---SURROUND BACKch (SBch 1SP)	CVSB UP<CR>
	SB DOWN		CVSB DOWN<CR>
	SB **	** :38 to 62 by ASCII , 50=0dB	CVSB 50<CR>
	FHL UP		CVFHL UP<CR>
	FHL DOWN	---FRONT HEIGHT Lch	CVFHL DOWN<CR>
	FHL **	** :38 to 62 by ASCII , 50=0dB	CVFHL 50<CR>
	FHR UP		CVFHR UP<CR>
	FHR DOWN	---FRONT HEIGHT Rch	CVFHR DOWN<CR>
	FHR **	** :38 to 62 by ASCII , 50=0dB	CVFHR 50<CR>
	FWL UP		CVFWL UP<CR>
	FWL DOWN	---FRONT WIDE Lch	CVFWL DOWN<CR>
	FWL **	** :38 to 62 by ASCII , 50=0dB	CVFWL 50<CR>
	FWR UP		CVFWR UP<CR>
	FWR DOWN	---FRONT WIDE Rch	CVFWR DOWN<CR>
	FWR **	** :38 to 62 by ASCII , 50=0dB	CVFWR 50<CR>
	?	Return CV Status	CV?<CR>
MU	ON	VOLUME MUTE ON/OFF change	MUON<CR>
	OFF		MUOFF<CR>
		?	Return MU Status
SI	PHONO	Select INPUT source	SIPHONO<CR>
	CD		SICD<CR>
	TUNER	---FM TUNER(Except North America model )	SITUNER<CR>
	DVD		SIDVD<CR>
	BD	---Blu-ray	SIBD<CR>
	TV	---TV AUDIO	SITV<CR>
	SAT/CBL	---CBL/SAT	SISAT/CBL<CR>
	<b>MPLAY</b>	---MEDIA PLAYER	<b>SIMPLAY&lt;CR&gt;</b>
	GAME		SIGAME<CR>
	<b>AUX1</b>	---AUX1	<b>SIAUX1&lt;CR&gt;</b>
	AUX2	---AUX2	<b>SIAUX2&lt;CR&gt;</b>

CV **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

COMMAND	PARAMETER	function	example
SI	AUX3	---AUX3 (Additional Source)	SIAUX3<CR>
	AUX4	---AUX4 (Additional Source)	SIAUX4<CR>
	AUX5	---AUX5 (Additional Source)	SIAUX5<CR>
	AUX6	---AUX6 (Additional Source)	SIAUX6<CR>
	AUX7	---AUX7 (Additional Source)	SIAUX7<CR>
	HDRADIO	---HD RADIO (North America model Only)	SIHDRADIO<CR>
	NET	---NETWORK	SINET<CR>
	PANDORA	(North America model Only)	SIPANDORA<CR>
	SIRIUSXM	(North America model Only)	SISIRIUSXM<CR>
	SPOTIFY	(North America & Europe model Only)	SISPOTIFY<CR>
	LASTFM	(Europe model Only)	SILASTFM<CR>
	FLICKR		SIFLICKR<CR>
	FAVORITES		SIFAVORITES<CR>
	IRADIO		SIIRADIO<CR>
	SERVER		SISERVER<CR>
	USB/IPOD	Select iPod/USB	SIUSE/IPOD<CR>
	USB	Select INPUT source iPod/USB and USB Start Playback	SIUSB<CR>
	IPD	Select INPUT source iPod/USB and iPod Direct Start Playback	SIIPD<CR>
	IRP	Select INPUT source NETWORK and Internet Radio Start Playback	SIIRP<CR>
	FVP	Select INPUT source NETWORK and Favorites Start Playback	SIFVP<CR>
	?	Return SI Status	SI?<CR>
ZM	ON	MAIN ZONE ON/OFF change	ZMON<CR>
	OFF		ZMOFF<CR>
		?	Return ZM Status

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
ZM	<b>FAVORITE1</b>	FAVORITE STATION 1-4 MODE SELECT	<b>ZMFAVORITE1&lt;CR&gt;</b>
	<b>FAVORITE2</b>		<b>ZMFAVORITE2&lt;CR&gt;</b>
	<b>FAVORITE3</b>		<b>ZMFAVORITE3&lt;CR&gt;</b>
	<b>FAVORITE4</b>		<b>ZMFAVORITE4&lt;CR&gt;</b>
	<b>FAVORITE1 MEMORY</b>	FAVORITE STATION 1-4 MODE MEMORY	<b>ZMFAVORITE1 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE2 MEMORY</b>		<b>ZMFAVORITE2 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE3 MEMORY</b>		<b>ZMFAVORITE3 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE4 MEMORY</b>		<b>ZMFAVORITE4 MEMORY&lt;CR&gt;</b>
SR	CD	REC SELECT mode set , and select source	SRCD<CR>
		---The name of PARAMETER is	
	USB/IPOD	the same as that of the time of SI COMMAND.	SRUSB/IPOD<CR>
	SOURCE	REC SELECT mode cancel	SRSOURCE<CR>
	?	Return SR Status	SR?<CR>

COMMAND	PARAMETER	function	example
SD	AUTO	set AUTO mode (Priority:HDMI>>DIGITAL>>ANALOG)	SDAUTO<CR>
	HDMI	set force HDMI INPUT mode	SDHDMI<CR>
	DIGITAL	set force DIGITAL INPUT (Optical,Coaxial)mode	SDDIGITAL<CR>
	ANALOG	set force ANALOG INPUT mode	SDANALOG<CR>
	EXT.IN	set force EXTERNAL INPUT mode	SDEXT.IN<CR>
	?	Return SD Status	SD?<CR>
DC	AUTO	set DIGITAL INPUT AUTO mode	DCAUTO<CR>
	PCM	set DIGITAL INPUT force PCM mode	DCPCM<CR>
	DTS	set DIGITAL INPUT force DTS mode	DCDTS<CR>
	?	Return DC Status	DC?<CR>
SV	DVD	VIDEO SELECT mode set , and select source	SVDVD<CR>
	BD	---Blu-ray	SVBD<CR>
	TV	---TV AUDIO	SVTV<CR>
	SAT/CBL	---CBL/SAT	SVSAT/CBL<CR>
	<b>MPLAY</b>	---MEDIA PLAYER	<b>SVMPLAY&lt;CR&gt;</b>
	GAME	---GAME	SVGAME<CR>
	<b>AUX1</b>	---AUX1	<b>SVAUX1&lt;CR&gt;</b>
	<b>AUX2</b>	---AUX2	<b>SVAUX2&lt;CR&gt;</b>
	<b>AUX3</b>	--- <b>AUX3 (Additional Source)</b>	<b>SVAUX3&lt;CR&gt;</b>
	<b>AUX4</b>	--- <b>AUX4 (Additional Source)</b>	<b>SVAUX4&lt;CR&gt;</b>
	<b>AUX5</b>	--- <b>AUX5 (Additional Source)</b>	<b>SVAUX5&lt;CR&gt;</b>
	<b>AUX6</b>	--- <b>AUX6 (Additional Source)</b>	<b>SVAUX6&lt;CR&gt;</b>
	<b>AUX7</b>	--- <b>AUX7 (Additional Source)</b>	<b>SVAUX7&lt;CR&gt;</b>
	<b>CD</b>		<b>SVCD&lt;CR&gt;</b>
	SOURCE	VIDEO SELECT mode cancel	SVSOURCE<CR>
	?	Return SV Status	SV?<CR>
SLP	OFF	MAIN ZONE SLEEP TIMER setting	SLPOFF<CR>
	***	***:001 to 120 by ASCII , 010=10min	SLP120<CR>
	?	Return SLP Status	SLP?<CR>

<b>COMMAND</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>	
MS	MOVIE	Select SURROUND mode	MSMOVIE<CR>	
	MUSIC		MSMUSIC<CR>	
	GAME		MSGAME<CR>	
	DIRECT		MSDIRECT<CR>	
	PURE DIRECT		MSPURE DIRECT<CR>	
	STEREO		MSSTEREO<CR>	
	STANDARD		MSSTANDARD<CR>	
	DOLBY DIGITAL		MSDOLBY DIGITAL<CR>	
	DTS SUROUND		MSDTS SURROUND<CR>	
	MCH STEREO		---MULTI CH STEREO mode	MSMCH STEREO<CR>
	WIDE SCREEN			MSWIDE SCREEN<CR>
	SUPER STADIUM			MSSUPER STADIUM<CR>
	ROCK ARENA			MSROCK ARENA<CR>
	JAZZ CLUB			MSJAZZ CLUB<CR>
	CLASSIC CONCERT			MSCCLASSIC CONCERT<CR>
	MONO MOVIE			MSMONO MOVIE<CR>
	MATRIX			MSMATRIX<CR>
	VIDEO GAME			MSVIDEO GAME<CR>
	VIRTUAL	MSVIRTUAL<CR>		
	?	Return MS Status		MS?<CR>
	QUICK1	QUICK SELECT 1-5 MODE SELECT		MSQUICK1<CR>
	QUICK2		MSQUICK2<CR>	
	QUICK3		MSQUICK3<CR>	
	QUICK4		MSQUICK4<CR>	
	QUICK5		MSQUICK5<CR>	
	QUICK1 MEMORY	QUICK SELECT 1-5 MODE MEMORY	MSQUICK1 MEMORY<CR>	
	QUICK2 MEMORY		MSQUICK2 MEMORY<CR>	
	QUICK3 MEMORY		MSQUICK3 MEMORY<CR>	
	QUICK4 MEMORY		MSQUICK4 MEMORY<CR>	
	QUICK5 MEMORY		MSQUICK5 MEMORY<CR>	
QUICK ?	Return MSQUICK Status	MSQUICK ?<CR>		

COMMAND	PARAMETER	function	example
VS	ASPNRM	Set Aspect Ratio to <b>4:3 mode</b>	VSASPNRM<CR>
	ASPFUL	Set Aspect Ratio to <b>16:9 mode</b>	VSASPFUL<CR>
	ASP ?	Return VSASP Status	VSASP ?<CR>
	MONIAUTO	Set HDMI MONITOR automatic detection	VSMONIAUTO<CR>
	MONI1	Set HDMI MONITOR OUT-1	VSMONI1<CR>
	MONI2	Set HDMI MONITOR OUT-2	VSMONI2<CR>
	MONI ?	Return VSMONI Status	VSMONI ?<CR>
	SC48P	Set Resolution to 480p/576p	VSSC48P<CR>
	SC10I	Set Resolution to 1080i	VSSC10I<CR>
	SC72P	Set Resolution to 720p	VSSC72P<CR>
	SC10P	Set Resolution to 1080p	VSSC10P<CR>
	SC10P24	Set Resolution to 10P24	VSSC10P24<CR>
	<b>SC4K</b>	<b>Set Resolution to 4K</b>	<b>VSSC4K&lt;CR&gt;</b>
	SCAUTO	Set Resolution to AUTO	VSSCAUTO<CR>
	SC ?	Return VSSC Status	VSSC ?<CR>
	SCH48P	Set Resolution to 480p/576p (HDMI)	VSSCH48P<CR>
	SCH10I	Set Resolution to 1080i (HDMI)	VSSCH10I<CR>
	SCH72P	Set Resolution to 720p (HDMI)	VSSCH72P<CR>
	SCH10P	Set Resolution to 1080p (HDMI)	VSSCH10P<CR>
	SCH10P24	Set Resolution to 10P24 (HDMI)	VSSCH10P24<CR>
	<b>SCH4K</b>	<b>Set Resolution to 4K (HDMI)</b>	<b>VSSCH4K&lt;CR&gt;</b>
	SCHAUTO	Set Resolution to AUTO (HDMI)	VSSCHAUTO<CR>
	SCH ?	Return VSSCH Status (HDMI)	VSSCH ?<CR>
	AUDIO AMP	Set HDMI AUDIO Output to <b>AVR</b>	VSAUDIO AMP<CR>
	AUDIO TV	Set HDMI AUDIO Output to TV	VSAUDIO TV<CR>
	AUDIO ?	Return VSAUDIO Status	VSAUDIO ?<CR>
	VPMAUTO	Set Video Processing Mode to AUTO	VSVPMAUTO<CR>
	VPMGAME	Set Video Processing Mode to GAME	VSVPMGAME<CR>
	VPMMOVI	Set Video Processing Mode to MOVIE	VSVPMMOVI<CR>
	VPM ?	Return VSVPM Status	VSVPM ?<CR>
	VST ON	Set VERTICAL STRETCH to ON	VSVST ON<CR>
	VST OFF	Set VERTICAL STRETCH to OFF	VSVST OFF<CR>
	VST ?	Return VSVST Status	VSVST ?<CR>

COMMAND	PARAMETER	function	example
PS	TONE CTRL OFF	PARAMETER setting	PSTONE CTRL OFF<CR>
	TONE CTRL ON	TONE CONTROL ON/OFF	PSTONE CTRL OFF<CR>
	TONE CTRL ?	Return PSTONE CONTROL Status	PSTONE CTRL ?<CR>
	CINEMA EQ.ON	CINEMA EQ. ON/OFF	PSCINEMA EQ.ON<CR>
	CINEMA EQ.OFF		PSCINEMA EQ.OFF<CR>
	CINEMA EQ. ?	Return PSCINEMA EQ.Status	PSCINEMA EQ. ?<CR>
	MODE:MUSIC	CINEMA / MUSIC / GAME mode change	PSMODE:MUSIC<CR>
	MODE:CINEMA	(This parameter can change DOLBY PL2, PL2x, NEO:X mode.)	PSMODE:CINEMA<CR>
	MODE:GAME	---SB=ON : PL2x mode / SB=OFF : PL2 mode --- GAME can change DOLBY PL2 & PL2x mode	PSMODE:GAME<CR>
	MODE: ?	Return PSMODE: Status	PSMODE: ?<CR>
	<b>LOM ON</b>	<b>Loudness Management ON/OFF Control</b>	<b>PSLOM ON&lt;CR&gt;</b>
	<b>LOM OFF</b>		<b>PSLOM OFF&lt;CR&gt;</b>
	<b>LOM ?</b>	<b>Return PSLOM: Status</b>	<b>PSLOM ? &lt;CR&gt;</b>
	PHG LOW	PLIIz HEIGHT GAIN direct change	PSPHG LOW<CR>
	PHG MID		PSPHG MID<CR>
	PHG HI		PSPHG HI<CR>
	PHG ?	Return PSPHG Status	PSPHG ?<CR>
	SP:FH	Speaker Output set (F.Height/F.Wide/S.Back)	PSSP:FH<CR>
	SP:FW		PSSP:FW<CR>
	SP:SB		PSSP:SB<CR>
	<b>SP:HW</b>		<b>PSSP:HW&lt;CR&gt;</b>
	<b>SP:BH</b>		<b>PSSP:BH&lt;CR&gt;</b>
	<b>SP:BW</b>		<b>PSSP:BW&lt;CR&gt;</b>
	SP:OFF		PSSP:OFF<CR>
	SP: ?	Return PSSP: Status	PSSP: ?<CR>

<b>COMMAND</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
PS	MULTEQ:AUDYSSEY	MulteQ XT 32 mode direct change	PSMULTEQ:AUDYSSEY<CR>
	MULTEQ:BY.P.LR		PSMULTEQ:BY.P.LR<CR>
	MULTEQ:FLAT		PSMULTEQ:FLAT<CR>
	MULTEQ:MANUAL		PSMULTEQ:MANUAL<CR>
	MULTEQ:OFF		PSMULTEQ:OFF<CR>
	MULTEQ: ?	Return PSMULTEQ: Status	PSMULTEQ: ?<CR>
	DYNEQ ON	Dynamic EQ = ON	PSDYNEQ ON<CR>
	DYNEQ OFF	Dynamic EQ = OFF	PSDYNEQ OFF<CR>
	DYNEQ ?	Return PSDYNEQ Status	PSDYNEQ ?<CR>
	REFLEV 0	Reference Level Offset=0dB	PSREFLEV 0<CR>
	REFLEV 5	Reference Level Offset=5dB	PSREFLEV 5<CR>
	REFLEV 10	Reference Level Offset=10dB	PSREFLEV 10<CR>
	REFLEV 15	Reference Level Offset=15dB	PSREFLEV 15<CR>
	REFREV ?	Return PSREFLEV Status	PSREFLEV ?<CR>
	<b>DYNVOL HEV</b>	<b>Dynamic Volume = Heavy</b>	<b>PSDYNVOL HEV&lt;CR&gt;</b>
	<b>DYNVOL MED</b>	<b>Dynamic Volume = Medium</b>	<b>PSDYNVOL MED&lt;CR&gt;</b>
	<b>DYNVOL LIT</b>	<b>Dynamic Volume = Light</b>	<b>PSDYNVOL LIT&lt;CR&gt;</b>
	<b>DYNVOL OFF</b>	<b>Dynamic Volume = OFF</b>	<b>PSDYNVOL OFF&lt;CR&gt;</b>
	DYNVOL ?	Return PSDYNVOL Status	PSDYNVOL ?<CR>
	<b>LFC ON</b>	<b>Audyssey LFC = ON</b>	<b>PSLFC ON&lt;CR&gt;</b>
	<b>LFC OFF</b>	<b>Audyssey LFC = OFF</b>	<b>PSLFC OFF&lt;CR&gt;</b>
	<b>LFC ?</b>	<b>Return PSLFC Status</b>	<b>PSLFC ?&lt;CR&gt;</b>
	<b>CNTAMT UP</b>	<b>Containment Amount UP/DOWN, direct change to **</b>	<b>PSCNTAMT UP&lt;CR&gt;</b>
	<b>CNTAMT DOWN</b>	<b>** : 00 to 99 by ASCII , 00=0,</b>	<b>PSCNTAMT DOWN&lt;CR&gt;</b>
	<b>CNTAMT **</b>	<b>---AVR-4520 can be operated from 1 to 7 (01 to 07)</b>	<b>PSCNTAMT **&lt;CR&gt;</b>
	<b>CNTAMT ?</b>	<b>Return PSCNTAMT Status</b>	<b>PSCNTAMT ?&lt;CR&gt;</b>

<b>COMMAND</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
PS	<b>DSX ONHW</b>	<b>Audyssey DSX ON(Heights &amp; Wides)</b>	<b>PSDSX ONHW&lt;CR&gt;</b>
	DSX ONH	Audyssey DSX ON(Heights)	PSDSX ONH<CR>
	DSX ONW	Audyssey DSX ON(Wides)	PSDSX ONW<CR>
	DSX OFF	Audyssey DSX OFF	PSDSX OFF<CR>
	DSX ?	Return PSDSX Status	PSDSX ?<CR>
	STW UP	STAGE WIDTH UP/DOWN, direct change to **dB	PSSTW UP<CR>
	STW DOWN	** :00 to 99 by ASCII, 50=0dB	PSSTW DOWN<CR>
	STW **	---AVR-4520 can be operated from -10 to +10(40 to 60)	PSSTW 50<CR>
	STW ?	Return PSSTW Status	PSSTW ?<CR>
	STH UP	STAGE HEIGHT UP/DOWN , direct change to **dB	PSSTH UP<CR>
	STH DOWN	** :00 to 99 by ASCII , 50=0dB	PSSTH DOWN<CR>
	STH **	---AVR-4520 can be operated from -10 to +10(40 to 60)	PSSTH 50<CR>
	STH ?	Return PSSTH Status	PSSTH ?<CR>
	BAS UP	BASS UP/DOWN , direct change to **dB	PSBAS UP<CR>
	BAS DOWN	** :00 to 99 by ASCII , 50=0dB	PSBAS DOWN<CR>
	BAS **	---AVR-4520 can be operated from -6 to +6(44 to 56)	PSBAS 50<CR>
	BAS ?	Return PSBAS Status	PSBAS ?<CR>
	TRE UP	TREBLE UP/DOWN , direct change to **dB	PSTRE UP<CR>
	TRE DOWN	** :00 to 99 by ASCII , 50=0dB	PSTRE DOWN<CR>
	TRE **	---AVR-4520 can be operated from -6 to +6(44 to 56)	PSTRE 50<CR>
	TRE ?	Return PSTRE Status	PSTRE ?<CR>
	DRC AUTO	Dynamic Compression direct change	PSDRC AUTO<CR>
	DRC LOW		PSDRC LOW<CR>
	DRC MID		PSDRC MID<CR>
	DRC HI		PSDRC HI<CR>
	DRC OFF		PSDRC OFF<CR>
	<b>DRC ?</b>	<b>Return PSDRC Status</b>	<b>PSDRC ?&lt;CR&gt;</b>

PS **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

COMMAND	PARAMETER	function	example
	BSC UP	Bass Sync UP/DOWN , direct change to **dB	PSBSC UP<CR>
	BSC DOWN	** : 00 to 99 by ASCII , 00=0	PSBSC DOWN<CR>
	BSC **	---AVR-4520 can be operated from 0 to 16(50 to 66)	PSBSC **<CR>
	BSC ?	Return PSBSC Status	PSBSC ? <CR>
	DEH OFF	Dialogue Enhancer direct change	PSDEH OFF<CR>
	DEH LOW		PSDEH LOW<CR>
	DEH MED		PSDEH MED<CR>
	DEH HIGH		PSDEH HIGH<CR>
	DEH ?	Return PSDEH Status	PSDEH ?<CR>
	LFE UP	LFE UP/DOWN , direct change to **dB	PSLEE UP<CR>
	LFE DOWN	** : 00 to 99 by ASCII , 00=0dB, 10=-10dB	PSLFE DOWN<CR>
	LFE **	---AVR-4520 can be operated from 0 to -10	PSLFE 10<CR>
	LFE ?	Return PSLFE Status	PSLFE ?<CR>
	LFL 00	LFE Level direct change (When the Input Mode is "EXTERNAL IN" mode only)	PSLFL 00<CR>
	LFL 05		PSLFL 05<CR>
	LFL 10		PSLFL 10<CR>
	LFL 15		PSLFL 15<CR>
	LFL ?	Return PSLFL Status	PSLFL ?<CR>
	EFF ON	EFFECT ON/OFF direct change	PSEFF ON<CR>
	EFF OFF		PSEFF OFF<CR>
	EFF UP	EFFECT UP/DOWN , EFFECT LEVEL direct change to **dB	PSEFF UP<CR>
	EFF DOWN		** : 00 to 99 by ASCII , 00=0dB, 10=10dB
	EFF **		---AVR-4520 can be operated from 1 to 15
	EFF ?	Return PSEFF Status	PSEFF ?<CR>
	DEL UP	DELAY UP/DOWN , direct change to ***dB	PSDEL UP<CR>
	DEL DOWN	*** : 000 to 999 by ASCII , 000=0ms, 300=300ms	PSDEL DOWN<CR>
	DEL ***	---AVR-4520 can be operated from 0 to 300	PSDEL ***<CR>
	DEL ?	Return PSDEL Status	PSDEL ?<CR>

PS **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
PS	PAN ON	PANORAMA ON/OFF	PSPAN ON<CR>
	PAN OFF		PSPAN OFF<CR>
	PAN ?	Return PSPAN Status	PSPAN ?<CR>
	DIM UP	DIMENSION UP/DOWN , direct change to **dB	PSDIM UP<CR>
	DIM DOWN	** : 00 to 99 by ASCII , 00=0,	PSDIM DOWN<CR>
	DIM **	--- AVR-4520 can be operated from 0 to 6	PSDIM **<CR>
	DIM ?	Return PSDIM Status	PSDIM ?<CR>
	CEN UP	CENTER WIDTH UP/DOWN , direct change to **dB	PSCEN UP<CR>
	CEN DOWN	** : 00 to 99 by ASCII , 00=0	PSCEN DOWN<CR>
	CEN **	--- AVR-4520 can be operated from 0 to 7	PSCEN 07<CR>
	CEN ?	Return PSCEN Status	PSCEN ?<CR>
	<b>CEG UP</b>	<b>CENTER GAIN UP/DOWN , direct change to **dB</b>	<b>PSCEG UP&lt;CR&gt;</b>
	<b>CEG DOWN</b>	<b>** : 00 to 99 by ASCII , 00=0.0</b>	<b>PSCEG DOWN&lt;CR&gt;</b>
	<b>CEG **</b>	<b>--- AVR-4520 can be operated from 0.0 to 1.0</b>	<b>PSCEG 10&lt;CR&gt;</b>
	<b>CEG ?</b>	<b>Return PSCEG Status</b>	<b>PSCEG ?&lt;CR&gt;</b>
	SWR ON	SW ON/OFF	PSSWR ON<CR>
	SWR OFF		PSSWR OFF<CR>
	SWR ?	Return PSSWR Status	PSSWR ?<CR>
	RSZ S	ROOM SIZE direct change	PSRSZ S<CR>
	RSZ MS		PSRSZ MS<CR>
	RSZ M		PSRSZ M<CR>
	RSZ ML		PSRSZ ML<CR>
	RSZ L		PSRSZ L<CR>
	RSZ ?	Return PSRSZ Status	PSRSZ ?<CR>
	DELAY UP	AUDIO DELAY UP/DOWN , direct change to ***dB	PSDELAY UP<CR>
	DELAY DOWN	*** : 000 to 999 by ASCII , 000=0ms, 200=200ms	PSDELAY DOWN<CR>
	DELAY ***	--- AVR-4520 can be operated from 0 to 200	PSDELAY 200<CR>
	DELAY ?	Return PSDELAY Status	PSDELAY ?<CR>

PS **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
PS	RSTR OFF	AUDIO RESTORER direct change	PSRSTR OFF<CR>
	RSTR MODE1		PSRSTR MODE1<CR>
	RSTR MODE2		PSRSTR MODE2<CR>
	RSTR MODE3		PSRSTR MODE3<CR>
	RSTR ?	Return PSRSTR Status	PSRSTR ?<CR>
	FRONT SPA	FRONT SPEAKER direct change	PSFRONT SPA<CR>
	FRONT SPB		PSFRONT SPB<CR>
	FRONT SPA+B		PSFRONT A+B<CR>
	FRONT?	Return PSFRONT Status	PSFRONT?<CR>

COMMAND	PARAMETER	function	example
PV	OFF	Picture Mode=OFF	PVOFF<CR>
	STD	Picture Mode=STANDARD	PVSTD<CR>
	MOV	Picture Mode=MOVIE	PVMOV<CR>
	VVD	Picture Mode=VIVID	PVVVD<CR>
	STM	Picture Mode=STREAM	PVSTM<CR>
	CTM	Picture Mode=CUSTOM	PVCTM<CR>
	?	Return PSPV Status	PV?<CR>
	CN UP	CONTRAST UP/DOWN , direct change to **dB	PVCN UP<CR>
	CN DOWN	** :44 to 56 by ASCII , 50=0	PVCN DOWN<CR>
	CN **	--- AVR-4520 can be operated from -6 to +6(44 to 56)	PVCN 50<CR>
	CN ?	Return PSCN Status	PVCN ?<CR>
	BR UP	BRIGHTNESS UP/DOWN , direct change to **dB	PVBR UP<CR>
	BR DOWN	** :00 to 12 by ASCII , 00=0	PVBR DOWN<CR>
	BR **	--- AVR-4520 can be operated from 0 to 12	PVBR 12<CR>
	BR ?	Return PSBR Status	PVBR ?<CR>
	CM UP	CHROMA LEVEL UP/DOWN , direct change to **dB	PVCM UP<CR>
	CM DOWN	** :44 to 56 by ASCII , 50=0	PVCM DOWN<CR>
	CM **	--- AVR-4520 can be operated from -6 to +6(44 to 56)	PVCM 50<CR>
	CM ?	Return PSCN Status	PVCM ?<CR>
	HUE UP	HUE UP/DOWN , direct change to **dB	PVHUE UP<CR>
	HUE DOWN	** :44 to 56 by ASCII , 50=0	PVHUE DOWN<CR>
	HUE **	--- AVR-4520 can be operated from -6 to +6(44 to 56)	PVHUE 50<CR>
	HUE ?	Return PSCN Status	PVHUE ?<CR>
	DNR OFF	DNR direct change	PVDNR OFF<CR>
	DNR LOW		PVDNR LOW<CR>
	DNR MID		PVDNR MID<CR>
	DNR HI		PVDNR HI<CR>
	DNR ?	Return PVDNR Status	PVDNR ?<CR>
	ENH UP	ENHANCER UP/DOWN, direct change to **dB	PVENH UP<CR>
	ENH DOWN	** :00 to 12 by ASCII, 00=0	PVENH DOWN<CR>
	ENH **	--- AVR-4520 can be operated from 0 to 12	PVENH 12<CR>
	ENH ?	Return PVENH Status	PVENH ?<CR>

PV **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

COMMAND	PARAMETER	function	example
Z2	PHONO   USB/IPOD	ZONE2 mode set , and select source ---The name of PARAMETER is the same as that of the time of SI COMMAND.	Z2PHONO<CR>   Z2USB/IPOD<CR>
	USB	Select ZONE2 source iPod/USB and USB Start Playback	Z2USB<CR>
	IPD	Select ZONE2 source iPod/USB and iPod Direct Start Playback	Z2IPD<CR>
	<b>IRP</b>	Select ZONE2 source NETWORK and Internet Radio Start Playback	<b>Z2IRP&lt;CR&gt;</b>
	<b>FVP</b>	Select ZONE2 source NETWORK and Favorites Start Playback	<b>Z2FVP&lt;CR&gt;</b>
	SOURCE	ZONE2 mode cancel	Z2SOURCE<CR>
	UP	ZONE2 VOLUME UP/DOWN , direct change to **dB  <b>** : 00 to 98 by ASCII , 80=80(0dB) , 00=-0(--dB) (MIN)</b>	Z2UP<CR>
	DOWN		Z2DOWN<CR>
	**		Z280<CR>
	ON	ZONE2 ON/OFF change	Z2ON<CR>
	OFF		Z2OFF<CR>
	?	Return Z2 Status	Z2?<CR>
Z2MU	ON	ZONE2 OUTPUT MUTE ON/OFF change	Z2MUON<CR>
	OFF		Z2MUOFF<CR>
	?	Return Z2MU Status	Z2MU?<CR>
Z2CS	ST	ZONE2 Channel setting	Z2CSST<CR>
	MONO		Z2CSMONO<CR>
	?	Return Z2CS Status	Z2CS?<CR>
Z2CV	FL UP	ZONE2 CHANNEL VOLUME UP/DOWN , direct change to **dB	Z2CVFL UP<CR>
	FL DOWN	---FRONT Lch	Z2CVFL DOWN<CR>
	FL **	** : 38 to 62 by ASCII , 50=0dB	Z2CVFL 50<CR>
	FR UP	ZONE2 CHANNEL VOLUME UP/DOWN , direct change to **dB	Z2CVFR UP<CR>
	FR DOWN	---FRONT Rch	Z2CVFR DOWN<CR>
	FR **	** : 38 to 62 by ASCII , 50=0dB	Z2CVFR 50<CR>
	?	Return Z2CV Status	Z2CV?<CR>
Z2HPF	ON	ZONE2 HPF ON/OFF	Z2HPFON<CR>
	OFF		Z2HPFOFF<CR>
	?	Return Z2HPF Status	Z2HPF?<CR>

Z2, Z2CV **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

COMMAND	PARAMETER	function	example
Z2PS	BAS UP	ZONE2 BASS UP/DOWN , direct change to **dB	Z2PSBAS UP<CR>
	BAS DOWN	** :00 to 99 by ASCII , 00=0dB	Z2PSBAS DOWN<CR>
	BAS **	---AVR-4520 can be operated from -10 to +10(40 to 60)	Z2PSBAS 50<CR>
	BAS ?	Return Z2PSBAS Status	Z2PSBAS ?<CR>
	TRE UP	ZONE2 TREBLE UP/DOWN , direct change to **dB	Z2PSTRE UP<CR>
	TRE DOWN	** :00 to 99 by ASCII , 00=0dB	Z2PSTRE DOWN<CR>
	TRE **	---AVR-4520 can be operated from -10 to +10(40 to 60)	Z2PSTRE 50<CR>
	TRE ?	Return Z2PSTRE Status	Z2PSTRE ?<CR>
Z2SLP	OFF	ZONE2 SLEEP TIMER setting	Z2SLPOFF<CR>
	***	***:001 to 120 by ASCII , 010=10min	Z2SLP120<CR>
	?	Return Z2SLP Status	Z2SLP?<CR>
Z2	<b>FAVORITE1</b>	ZONE2 FAVORITE STATION 1-4 MODE SELECT	<b>Z2FAVORITE1&lt;CR&gt;</b>
	<b>FAVORITE2</b>		<b>Z2FAVORITE2&lt;CR&gt;</b>
	<b>FAVORITE3</b>		<b>Z2FAVORITE3&lt;CR&gt;</b>
	<b>FAVORITE4</b>		<b>Z2FAVORITE4&lt;CR&gt;</b>
	<b>FAVORITE1 MEMORY</b>	ZONE2 FAVORITE STATION 1-4 MODE MEMORY	<b>Z2FAVORITE1 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE2 MEMORY</b>		<b>Z2FAVORITE2 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE3 MEMORY</b>		<b>Z2FAVORITE3 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE4 MEMORY</b>		<b>Z2FAVORITE4 MEMORY&lt;CR&gt;</b>
	QUICK1	ZONE2 QUICK SELECT 1-5 MODE SELECT	Z2QUICK1<CR>
	QUICK2		Z2QUICK2<CR>
	QUICK3		Z2QUICK3<CR>
	QUICK4		Z2QUICK4<CR>
	QUICK5		Z2QUICK5<CR>
	QUICK1 MEMORY	ZONE2 QUICK SELECT 1-5 MODE MEMORY	Z2QUICK1 MEMORY<CR>
	QUICK2 MEMORY		Z2QUICK2 MEMORY<CR>
	QUICK3 MEMORY		Z2QUICK3 MEMORY<CR>
	QUICK4 MEMORY		Z2QUICK4 MEMORY<CR>
	QUICK5 MEMORY		Z2QUICK5 MEMORY<CR>
	QUICK ?	Return Z2QUICK Status	Z2QUICK ?<CR>

Z2PS **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
Z3	PHONO   USB/IPOD	ZONE3 mode set , and select source ---The name of PARAMETER is the same as that of the time of SI COMMAND.	Z3PHONO<CR>   Z3USB/IPOD<CR>
	USB	Select ZONE3 source iPod/USB and USB Start Playback	Z3USB<CR>
	IPD	Select ZONE3 source iPod/USB and iPod Direct Start Playback	Z3IPD<CR>
	<b>IRP</b>	Select ZONE3 source NETWORK and Internet Radio Start Playback	<b>Z3IRP&lt;CR&gt;</b>
	<b>FVP</b>	Select ZONE3 source NETWORK and Favorites Start Playback	<b>Z3FVP&lt;CR&gt;</b>
	SOURCE	ZONE3 mode cancel	Z3SOURCE<CR>
	UP	ZONE3 VOLUME UP/DOWN , direct change to **dB  <b>** : 00 to 98 by ASCII , 80=80(0dB) , 00=-0(--dB) (MIN)</b>	Z3UP<CR>
	DOWN		Z3DOWN<CR>
	**		Z380<CR>
	ON	ZONE3 ON/OFF change	Z3ON<CR>
	OFF		Z3OFF<CR>
	?	Return Z3 Status	Z3?<CR>
Z3MU	ON	ZONE3 OUTPUT MUTE ON/OFF change	Z3MUON<CR>
	OFF		Z3MUOFF<CR>
	?	Return Z3MU Status	Z3MU?<CR>
Z3CS	ST	ZONE3 Channel setting	Z3CSST<CR>
	MONO		Z3CSMONO<CR>
	?	Return Z3CS Status	Z3CS?<CR>
Z3CV	FL UP	ZONE3 CHANNEL VOLUME UP/DOWN , direct change to **dB	Z3CVFL UP<CR>
	FL DOWN	---FRONT Lch	Z3CVFL DOWN<CR>
	FL **	** : 38 to 62 by ASCII , 50=0dB	Z3CVFL 50<CR>
	FR UP	ZONE3 CHANNEL VOLUME UP/DOWN , direct change to **dB	Z3CVFR UP<CR>
	FR DOWN	---FRONT Rch	Z3CVFR DOWN<CR>
	FR **	** : 38 to 62 by ASCII , 50=0dB	Z3CVFR 50<CR>
	?	Return Z3CV Status	Z3CV?<CR>
Z3HPF	ON	ZONE3 HPF ON/OFF	Z3HPFON<CR>
	OFF		Z3HPFOFF<CR>
	?	Return Z3HPF Status	Z3HPF?<CR>

Z3, Z3CV **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

COMMAND	PARAMETER	function	example
Z3PS	BAS UP	ZONE3 BASS UP/DOWN , direct change to **dB **:00 to 99 by ASCII , 00=0dB ---AVR-4520 can be operated from -10 to +10(40 to 60)	Z3PSBAS UP<CR>
	BAS DOWN		Z3PSBAS DOWN<CR>
	BAS **		Z3PSBAS 50<CR>
	BAS ?		Z3PSBAS ?<CR>
	TRE UP	ZONE3 TREBLE UP/DOWN , direct change to **dB **:00 to 99 by ASCII , 00=0dB ---AVR-4520 can be operated from -10 to +10(40 to 60)	Z3PSTRE UP<CR>
	TRE DOWN		Z3PSTRE DOWN<CR>
	TRE **		Z3PSTRE 50<CR>
	TRE ?		Z3PSTRE ?<CR>
Z3SLP	OFF	ZONE3 SLEEP TIMER setting	Z3SLPOFF<CR>
	***	***:001 to 120 by ASCII , 010=10min	Z3SLP120<CR>
	?	Return Z3SLP Status	Z3SLP?<CR>
Z3	<b>FAVORITE1</b>	ZONE3 FAVORITE STATION 1-4 MODE SELECT	<b>Z3FAVORITE1&lt;CR&gt;</b>
	<b>FAVORITE2</b>		<b>Z3FAVORITE2&lt;CR&gt;</b>
	<b>FAVORITE3</b>		<b>Z3FAVORITE3&lt;CR&gt;</b>
	<b>FAVORITE4</b>		<b>Z3FAVORITE4&lt;CR&gt;</b>
	<b>FAVORITE1 MEMORY</b>	ZONE3 FAVORITE STATION 1-4 MODE MEMORY	<b>Z3FAVORITE1 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE2 MEMORY</b>		<b>Z3FAVORITE2 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE3 MEMORY</b>		<b>Z3FAVORITE3 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE4 MEMORY</b>		<b>Z3FAVORITE4 MEMORY&lt;CR&gt;</b>
	QUICK1	ZONE3 QUICK SELECT 1-5 MODE SELECT	Z3QUICK1<CR>
	QUICK2		Z3QUICK2<CR>
	QUICK3		Z3QUICK3<CR>
	QUICK4		Z3QUICK4<CR>
	QUICK5		Z3QUICK5<CR>
	QUICK1 MEMORY	ZONE3 QUICK SELECT 1-5 MODE MEMORY	Z3QUICK1 MEMORY<CR>
	QUICK2 MEMORY		Z3QUICK2 MEMORY<CR>
	QUICK3 MEMORY		Z3QUICK3 MEMORY<CR>
	QUICK4 MEMORY		Z3QUICK4 MEMORY<CR>
	QUICK5 MEMORY		Z3QUICK5 MEMORY<CR>
	QUICK ?	Return Z3QUICK Status	Z3QUICK ?<CR>

Z3PS **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

COMMAND	PARAMETER	function	example
Z4	DVD 	ZONE4 mode set , and select source ---The name of PARAMETER is the same as that of the time of SI COMMAND that is assigned HDMI INPUT.	Z4DVD<CR> 
	SOURCE	ZONE4 mode cancel	Z4SOURCE<CR>
	ON	ZONE4 ON/OFF change	Z4ON<CR>
	OFF		Z4OFF<CR>
	?	Return Z4 Status	Z4?<CR>
Z4SLP	OFF	ZONE4 SLEEP TIMER setting	Z4SLPOFF<CR>
	***	***:001 to 120 by ASCII , 010=10min	Z4SLP120<CR>
	?	Return Z4SLP Status	Z4SLP?<CR>

## ※ ANALOG TUNER(FM) Control

COMMAND	PARAMETER	function	example
TF	ANUP	TUNER Frequency UP/DOWN	TFANUP<CR>
	ANDOWN		TFANDOWN<CR>
	AN***** (6 digits)	--- ****.** MHz at FM band (<050000 is FM.)	TFAN008750<CR> (87.50MHz at FM)
	AN?	Return TF Status	TFAN?<CR>
TP	ANUP	TUNER PRESET CH UP/DOWN , direct change to No.**	TPANUP<CR>
	ANDOWN	<b>** : 01-56 01=CH01,56=CH56</b>	TPANDOWN<CR>
	AN** (PRESET No.)		<b>TPAN01&lt;CR&gt;</b> <b>(PRESET No."01")</b>
	AN?	Return TP Status	TPAN?<CR>
	ANMEM	TUNER PRESET MEMORY	TPANMEM<CR>
	ANMEM**	TUNER PRESET MEMORY, Preset stored at No.** <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPANMEM**&lt;CR&gt;</b>
TM	AN?	Return TM Status	TMAN?<CR>
	ANAUTO	---Tuning mode set to AUTO mode	TMANAUTO<CR>
	ANMANUAL	---Tuning mode set to MANUAL mode	TMANMANUAL<CR>

TF, TP, TM **COMMAND** : '\*' parameters can NOT operate when INPUT source isn't TUNER(FM).

✳️ HD RADIO Control (AVR-4520CI North America model only)

COMMAND	PARAMETER	function	example
TF	HDUP	HD Channel UP/DOWN , direct change	TFHDUP<CR>
	HDDOWN		TFHDDOWN<CR>
	HD***** (6 digits)	--- ****.** kHz at AM band (>050000 is AM.) ****.** MHz at FM band (<050000 is FM.)	TFHD105000<CR> (1050.00kHz at AM)
	HDMC* (1 digit)	---HD Multi Cast CH Select (*:Multi Cast 1-8)	TFHDMC2<CR>
	HD*****MC*	---Frequency and HD Multi Cast CH Select	TFHD008750MC5<CR> (87.50kHz at FM)
	HD?	Return TFHD Status	TFHD?<CR>
TP	HDUP	HD PRESET CH UP/DOWN , direct change to No.**	TPHDUP<CR>
	HDDOWN	<b>** : 01-56 01=CH01,56=CH56</b>	TPHDDOWN<CR>
	HD** (PRESET No.)		<b>TPHD01&lt;CR&gt;</b> <b>(PRESET No."01")</b>
	HD?	Return TPHD Status	TPHD?<CR>
	HDMEM	HD PRESET MEMORY	TPHDMEM<CR>
	<b>HDMEM**</b>	HD Radio PRESET MEMORY, Preset stored at No.** <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPHDMEM**&lt;CR&gt;</b>
TM	HDAM	HD RADIO BAND , MODE Select ---Band set to AM	TMHDAM<CR>
	HDFM	---Band set to FM	TMHDFM<CR>
	HD?	Return TMHD Status	TMHD?<CR>
	HDAUTOHD	---Tuning mode set to AUTO-HD mode	TMHDAUTOHD<CR>
	HDAUTO	---Tuning mode set to AUTO mode	TMHDAUTO<CR>
	HDMANUAL	---Tuning mode set to MANUAL mode	TMHDMANUAL<CR>
	<b>HDANAAUTO</b>	<b>---Tuning mode set to ANALOG AUTO mode</b>	<b>TMHDANAAUTO&lt;CR&gt;</b>
	<b>HDANAMANU</b>	<b>---Tuning mode set to ANALOG AUTO MANUAL mode</b>	<b>TMHDANAMANU&lt;CR&gt;</b>
	HD?	Return TMHD Status	TMHD?<CR>
HD	? Return HD Status HD? ---BAND, STATION NAME, MULTI CAST CURRENT, MULTI CAST NUMBER, SIGNAL LEVEL, ARTIST, TITLE,ALBUM, GENRE, PROGRAM TYPE, MODE	HD?<CR>	

## ✳️Network Audio/USB /iPod DIRECT Extended Control

COMMAND	PARAMETER	function	example
NS	90	"Cursor Up" Control	NS90<CR>
	91	"Cursor Down" Control	NS91<CR>
	92	"Cursor Left" Control	NS92<CR>
	93	"Cursor Right" Control	NS93<CR>
	94	"Enter (Play/Pause)" Control	NS94<CR>
	9A	"Play" Control (iRadio/mServer/USB) "Play/Pause" Control (iPod Direct)	NS9A<CR>
	9B	"Pause" Control "Play/Pause" Control (iPod Direct)	NS9B<CR>
	9C	"Stop" Control	NS9C<CR>
	9D	"Skip Plus" Control	NS9D<CR>
	9E	"Skip Minus" Control	NS9E<CR>
	<b>9F</b>	<b>"Manual Search Plus" Control (iPod Direct)</b>	<b>NS9F&lt;CR&gt;</b>
	<b>9G</b>	<b>"Manual Search Minus" Control (iPod Direct)</b>	<b>NS9G&lt;CR&gt;</b>
	9H	"Repeat One" (USB/iPod DIRECT/mServer)	NS9H<CR>
	9I	"Repeat All" (USB/iPod DIRECT/mServer)	NS9I<CR>
	9J	"Repeat Off" (USB/iPod DIRECT/mServer)	NS9J<CR>
	9K	"Random On/Repeat ALL" (USB/mServer) "Shuffle Songs" Control (iPod Direct Only)	NS9K<CR>
	9M	"Random Off" (USB/mServer) "Shuffle Off" Control (iPod Direct Only)	NS9M<CR>
	9W	Toggle Switch "iPod Browse Mode On-Screen or From iPod" Control (iPod Direct Only)	NS9W<CR>
	9X	"Page Next" Control	NS9X<CR>
	9Y	"Page Previous" Control	NS9Y<CR>
<b>9Z</b>	<b>"Manual Search STOP" Control (iPod Direct)</b>	<b>NS9Z&lt;CR&gt;</b>	
NSA		Return Onscreen Display Information List (ASCII CODE Character)	NSA<CR> (Return NSA0-NSA8, Refer to Page 37)
NSE		Request Onscreen Display Information List (UTF-8 CODE Character)	NSE<CR> (Return NSE0-NSE8, Refer to Page 38)
NSD	*	"Direct Text Search" (iRadio/mServer/USB only)	NSD0<CR> (*:0-9,A-Z)

<i>COMMAND</i>	<i>PARAMETER</i>	function	example
NS	B** (PRESET No.)	Preset Call ** : 00-55 00=CH01,55=CH56	NSB00<CR>
	C** (PRESET No.)	Preset Memory, Preset stored at No.** ** : 00-55 00=CH01,55=CH56	NSC00<CR>
	H	Return Preset Channel 01-56 status (UTF-8)	NSH<CR>

### ※Cursor/Enter/Setup Menu

COMMAND	PARAMETER	function	example
MN	CUP	"Cursor Up" Control	MNCUP<CR>
	CDN	"Cursor Down" Control	MNCDN<CR>
	CLT	"Cursor Left" Control	MNCLT<CR>
	CRT	"Cursor Right" Control	MNCRT<CR>
	ENT	"Enter" Control	MNENT<CR>
	RTN	"RETURN" Control	MNRTN<CR>
	<b>OPT</b>	"OPTION" Control	<b>MNOPT&lt;CR&gt;</b>
	<b>INF</b>	"INFO" Control	<b>MNINF&lt;CR&gt;</b>
	MEN ON	"Setup Menu ON" Control	MNMEN ON<CR>
	MEN OFF	"Setup Menu OFF" Control	MNMEN OFF<CR>
	<b>MEN?</b>	<b>Return MNMEN(Menu) status</b>	<b>MNMEN?&lt;CR&gt;</b>
	PRV ON	"InstaPrevue ON" Control	MNPRV ON<CR>
	PRV OFF	"InstaPrevue OFF" Control	MNPRV OFF<CR>
	<b>PRV?</b>	<b>Return MNPRV(InstaPrevue) status</b>	<b>MNPRV?&lt;CR&gt;</b>
	ZST ON	"All Zone Stereo ON" Control	MNZST ON<CR>
ZST OFF	"All Zone Stereo OFF" Control	MNZST OFF<CR>	

### ※TRIGGER CONTROL

COMMAND	PARAMETER	function	example
TR	1 ON	Trigger 1 ON/OFF Control	TR1 ON<CR>
	1 OFF		TR1 OFF<CR>
	2 ON	Trigger 2 ON/OFF Control	TR2 ON<CR>
	2 OFF		TR2 OFF<CR>

**※Remote Lock/Panel Lock**

<i>COMMAND</i>	<i>PARAMETER</i>	function	example
SY	REMOTE LOCK ON	REMOTE CONTROL LOCK ON/OFF	SYREMOTE LOCK ON<CR>
	REMOTE LOCK OFF		SYREMOTE LOCK OFF<CR>
	PANEL LOCK ON	PANEL BUTTON (Except MASTER VOL.) CONTROL LOCK ON	SYPANEL LOCK ON<CR>
	PANEL+V LOCK ON	PANEL BUTTON & MASTER VOL. CONTROL LOCK ON	SYPANEL+V LOCK ON<CR>
	PANEL LOCK OFF	PANEL BUTTUM & MASTER VOL. CONTROL LOCK OFF	SYPANEL LOCK OFF<CR>

**※UPGRADE ID Display**

<i>COMMAND</i>	<i>PARAMETER</i>	function	example
UG	IDN	ID Number for UPGRADE is displayed on FL Display	UGIDN<CR>

## EVENT (or RESPONSE) and PARAMETER list

<i>EVENT</i>	<i>PARAMETER</i>	function	example
PW	ON	POWER ON/STANDBY change	PWON<CR>
	STANDBY		PWSTANDBY<CR>
MV	**	MASTER VOLUME change , **:00 to 98 by ASCII 98 = 18dB (MAX) 80 = 00dB 01 = -79dB 005 = -79.5dB 00 = --- (MIN)	MV80<CR>
CV	FL **	CHANNEL VOLUME change , **:00,38 to 62 by ASCII 62 = +12dB (MAX) 50 = 0dB 38 = -12dB (MIN) 00 = OFF (define ONLY SW&SW2ch in DIRECT mode.)	CVFL 50<CR>
	FR **		CVFR 50<CR>
	C **		CVC 50<CR>
	SW **		CVSW 50<CR>
	<b>SW2 **</b>		<b>CVSW2 50&lt;CR&gt;</b>
	SL **		CVSL 50<CR>
	SR **		CVSR 50<CR>
	SBL **		CVSBL 50<CR>
	SBR **		CVSBR 50<CR>
	SB **		CVSB 50<CR>
	FHL **		CVFHL 50<CR>
	FHR **		CVFHR 50<CR>
	FWL **		CVFWL 50<CR>
	FWR **		CVFWR 50<CR>
	MU		ON
OFF		MUOFF<CR>	

The *PARAMETER* of MV, CV *EVENT* : Uses two or three ASCII characters. (see page6 J) section)

<b>EVENT</b>	<b>PARAMETER</b>	function	example
SI	PHONO	INPUT source change	SIPHONO<CR>
	CD		SICD<CR>
	TUNER	---FM TUNER(Except North America model )	SITUNER<CR>
	DVD		SIDVD<CR>
	BD	---Blu-ray	SIBD<CR>
	TV	---TV AUDIO	SITV<CR>
	SAT/CBL	---CBL/SAT	SISAT/CBL<CR>
	<b>MPLAY</b>	---MEDIA PLAYER	<b>SIMPLAY&lt;CR&gt;</b>
	GAME		SIGAME<CR>
	<b>AUX1</b>	---AUX1	<b>SIAUX1&lt;CR&gt;</b>
	<b>AUX2</b>	---AUX2	<b>SIAUX2&lt;CR&gt;</b>
	<b>AUX3</b>	---AUX3 (Additional Source)	<b>SIAUX3&lt;CR&gt;</b>
	<b>AUX4</b>	---AUX4 (Additional Source)	<b>SIAUX4&lt;CR&gt;</b>
	<b>AUX5</b>	---AUX5 (Additional Source)	<b>SIAUX5&lt;CR&gt;</b>
	<b>AUX6</b>	---AUX6 (Additional Source)	<b>SIAUX6&lt;CR&gt;</b>
	<b>AUX7</b>	---AUX7 (Additional Source)	<b>SIAUX7&lt;CR&gt;</b>
	HDRADIO	---HD RADIO (North America model Only)	SIHDRADIO<CR>
	<b>NET</b>	---NETWORK	<b>SINET&lt;CR&gt;</b>
	PANDORA	(North America model Only)	SIPANDORA<CR>
	<b>SIRIUSXM</b>	(North America model Only)	<b>SISIRIUSXM&lt;CR&gt;</b>
	<b>SPOTIFY</b>	<b>(North America &amp; Europe model Only)</b>	<b>SISPOTIFY&lt;CR&gt;</b>
	LASTFM	(Europe model Only)	SILASTFM<CR>
	FLICKR		SIFLICKR<CR>
	FAVORITES		SIFAVORITES<CR>
	IRADIO		SIIRADIO<CR>
	SERVER		SISERVER<CR>
	USB/IPOD	---iPod/USB	SIUSB/IPOD<CR>
	USB DIRECT		SIUSB DIRECT<CR>
	IPOD DIRECT		SIIPOD DIRECT<CR>
	USB		SIUSB<CR>
	IPD		SIIPD<CR>
	<b>IRP</b>		<b>SIIRP&lt;CR&gt;</b>
	<b>FVP</b>		<b>SIFVP&lt;CR&gt;</b>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
ZM	ON	MAIN ZONE ON/OFF change	ZMON<CR>
	OFF		ZMOFF<CR>
	<b>FAVORITE1</b>	FAVORITE STATION 1-4 MODE SELECT	<b>ZMFAVORITE1&lt;CR&gt;</b>
	<b>FAVORITE2</b>		<b>ZMFAVORITE2&lt;CR&gt;</b>
	<b>FAVORITE3</b>		<b>ZMFAVORITE3&lt;CR&gt;</b>
	<b>FAVORITE4</b>		<b>ZMFAVORITE4&lt;CR&gt;</b>
	<b>FAVORITE1 MEMORY</b>	FAVORITE STATION 1-4 MODE MEMORY	<b>ZMFAVORITE1 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE2 MEMORY</b>		<b>ZMFAVORITE2 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE3 MEMORY</b>		<b>ZMFAVORITE3 MEMORY&lt;CR&gt;</b>
<b>FAVORITE4 MEMORY</b>	<b>ZMFAVORITE4 MEMORY&lt;CR&gt;</b>		
SR	PHONO   IPOD DIRECT	REC SELECT source change ---The name of PARAMETER is the same as that of the time of SI COMMAND.	SRPHONO<CR>
	SOURCE	REC SELECT mode cancel	SRSOURCE<CR>
	SD	INPUT mode change	SDAUTO<CR>
SD	HDMI	<b>EXTERNAL IN</b>	SDHDMI<CR>
	DIGITAL		SDDIGITAL<CR>
	ANALOG		SDANALOG<CR>
	<b>EXT.IN</b>		<b>SDEXT.IN&lt;CR&gt;</b>
	ARC	ARC playing	SDARC<CR>
	NO	No Input	SDNO<CR>
	DC	DIGITAL INPUT mode change	DCAUTO<CR>
DC	PCM	DCPCM<CR>	
	DTS	DCDTS<CR>	

<b>EVENT</b>	<b>PARAMETER</b>	function	example
SV	DVD	VIDEO SELECT mode source change	SVDVD<CR>
	BD	---Blu-ray	SVBD<CR>
	TV	---TV AUDIO	SVTV<CR>
	SAT/CBL	---CBL/SAT	SVSAT/CBL<CR>
	<b>MPLAY</b>	---MEDIA PLAYER	<b>SVMPLAY</b> <CR>
	<b>GAME</b>	---GAME	<b>SVGAME</b> <CR>
	<b>AUX1</b>	---AUX1	<b>SVAUX1</b> <CR>
	<b>AUX2</b>	---AUX2	<b>SVAUX2</b> <CR>
	<b>AUX3</b>	--- <b>AUX3 (Additional Source)</b>	<b>SVAUX3</b> <CR>
	<b>AUX4</b>	--- <b>AUX4 (Additional Source)</b>	<b>SVAUX4</b> <CR>
	<b>AUX5</b>	--- <b>AUX5 (Additional Source)</b>	<b>SVAUX5</b> <CR>
	<b>AUX6</b>	--- <b>AUX6 (Additional Source)</b>	<b>SVAUX6</b> <CR>
	<b>AUX7</b>	--- <b>AUX7 (Additional Source)</b>	<b>SVAUX7</b> <CR>
	<b>CD</b>		<b>SVCD</b> <CR>
	SOURCE		SVSOURCE<CR>
SLP	OFF	MAIN ZONE SLEEP TIMER setting change	SLPOFF<CR>
	***		SLP120<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
MS	DIRECT	SURROUND mode change	MSDIRECT<CR>
	PURE DIRECT		MSPURE DIRECT<CR>
	STEREO		MSSTEREO<CR>
	MULTI CH IN		MSMULTI CH IN<CR>
	M CH IN+PL2X C		MSM CH IN+PL2X C<CR>
	M CH IN+PL2X M		MSM CH IN+PL2X M<CR>
	M CH IN+PL2Z H		MSM CH IN+PL2Z H<CR>
	M CH IN +DOLBY EX		MSM CH IN+DOLBY EX<CR>
	MULTI CH IN 7.1		MSMULTI CH IN 7.1<CR>
	DOLBY PL2 C		MSDOLBY PL2 C<CR>
	DOLBY PL2 M		MSDOLBY PL2 M<CR>
	DOLBY PL2 G		MSDOLBY PL2 G<CR>
	DOLBY PL2X C		MSDOLBY PL2X C<CR>
	DOLBY PL2X M		MSDOLBY PL2X M<CR>
	DOLBY PL2X G		MSDOLBY PL2X G<CR>
	DOLBY PL2Z H		MSDOLBY PL2Z H<CR>
	DOLBY DIGITAL		MSDOLBY DIGITAL<CR>
	DOLBY D EX		MSDOLBY D EX<CR>
	DOLBY D +PL2X C		MSDOLBY D+PL2X C<CR>
	DOLBY D +PL2X M		MSDOLBY D+PL2X M<CR>
	DOLBY D +PL2Z H		MSDOLBY D+PL2Z H<CR>
	<b>DOLBY D +NEO:X C</b>		<b>MSDOLBY D+NEO:X C&lt;CR&gt;</b>
<b>DOLBY D +NEO:X M</b>	<b>MSDOLBY D+NEO:X M&lt;CR&gt;</b>		
<b>DOLBY D +NEO:X G</b>	<b>MSDOLBY D+NEO:X G&lt;CR&gt;</b>		

<i>EVENT</i>	<i>PARAMETER</i>	function	example
MS	<b>DTS NEO:X C</b>		<b>MSDTS NEO:X C&lt;CR&gt;</b>
	<b>DTS NEO:X M</b>		<b>MSDTS NEO:X M&lt;CR&gt;</b>
	<b>DTS NEO:X G</b>		<b>MSDTS NEO:X G&lt;CR&gt;</b>
	DTS SURROUND		MSDTS SURROUND<CR>
	DTS ES DSCRT6.1		MSDTS ES DSCRT6.1<CR>
	DTS ES MTRX6.1		MSDTS ES MTRX6.1<CR>
	DTS+PL2X C		MSDTS+PL2X C<CR>
	DTS+PL2X M		MSDTS+PL2X M<CR>
	DTS+PL2Z H		MSDTS+PL2Z H<CR>
	<b>DTS+NEO:X C</b>		<b>MSDTS+NEO:X C&lt;CR&gt;</b>
	<b>DTS+NEO:X M</b>		<b>MSDTS+NEO:X M&lt;CR&gt;</b>
	<b>DTS+NEO:X G</b>		<b>MSDTS+NEO:X G&lt;CR&gt;</b>
	DTS96/24		MSDTS96/24<CR>
	DTS96 ES MTRX		MSDTS96 ES MTRX<CR>
	MCH STEREO		MSMCH STEREO<CR>
	ROCK ARENA		MSROCK ARENA<CR>
	JAZZ CLUB		MSJAZZ CLUB<CR>
	MONO MOVIE		MSMONO MOVIE<CR>
	MATRIX		MSMATRIX<CR>
	VIDEO GAME		MSVIDEO GAME<CR>
	VIRTUAL		MSVIRTUAL<CR>
	DOLBY D+		MSDOLBY D+<CR>
	DOLBY D+ +EX		MSDOLBY D+ +EX<CR>
	DOLBY D+ +PL2X C		MSDOLBY D+ +PL2X C<CR>
	DOLBY D+ +PL2X M		MSDOLBY D+ +PL2X M<CR>
	DOLBY D+ +PL2Z H		MSDOLBY D+ +PL2Z H<CR>
	<b>DOLBY D+ +NEO:X C</b>		<b>MSDOLBY D+ +NEO:X C&lt;CR&gt;</b>
	<b>DOLBY D+ +NEO:X M</b>		<b>MSDOLBY D+ +NEO:X M&lt;CR&gt;</b>
	<b>DOLBY D+ +NEO:X C</b>		<b>MSDOLBY D+ +NEO:X G&lt;CR&gt;</b>

<i>EVENT</i>	<i>PARAMETER</i>	function	example
	DOLBY TRUEHD		MSDOLBY HD<CR>
	DOLBY HD		MSDOLBY HD<CR>
	DOLBY HD+EX		MSDOLBY HD+EX<CR>
	DOLBY HD+PL2X C		MSDOLBY HD+PL2X C<CR>
	DOLBY HD+PL2X M		MSDOLBY HD+PL2X M<CR>
	DOLBY HD+PL2Z H		MSDOLBY HD+PL2Z H<CR>
	<b>DOLBY HD+NEO:X C</b>		<b>MSDOLBY HD+NEO:X C&lt;CR&gt;</b>
	<b>DOLBY HD+NEO:X M</b>		<b>MSDOLBY HD+NEO:X M&lt;CR&gt;</b>
	<b>DOLBY HD+NEO:X G</b>		<b>MSDOLBY HD+NEO:X G&lt;CR&gt;</b>
	DTS HD		MSDTS HD<CR>
	DTS HD MSTR		MSDTS HD MSTR<CR>
	DTS HD+PL2X C		MSDTS HD+PL2X C<CR>
	DTS HD+PL2X M		MSDTS HD+PL2X M<CR>
	DTS HD+PL2Z H		MSDTS HD+PL2Z H<CR>
	<b>DTS HD+NEO:X C</b>		<b>MSDTS HD+NEO:X C&lt;CR&gt;</b>
	<b>DTS HD+NEO:X M</b>		<b>MSDTS HD+NEO:X M&lt;CR&gt;</b>
	<b>DTS HD+NEO:X G</b>		<b>MSDTS HD+NEO:X G&lt;CR&gt;</b>
	DTS ES 8CH DSCRT		MSDTS ES 8CH DSCRT<CR>
	DTS EXPRESS		MSDTS EXPRESS<CR>
	MPEG2 AAC	(JAPAN model Only)	MSMPEG2 AAC<CR>
	AAC+DOLBY EX	(JAPAN model Only)	MSAAC+DOLBY EX<CR>
	AAC+PL2X C	(JAPAN model Only)	MSAAC+PL2X C<CR>
	AAC+PL2X M	(JAPAN model Only)	MSAAC+PL2X M<CR>
	AAC+PL2Z H	(JAPAN model Only)	MSAAC+PL2Z H<CR>
	<b>AAC+NEO:X C</b>	<b>(JAPAN model Only)</b>	<b>MSAAC+NEO:X C&lt;CR&gt;</b>
	<b>AAC+NEO:X M</b>	<b>(JAPAN model Only)</b>	<b>MSAAC+NEO:X M&lt;CR&gt;</b>
	<b>AAC+NEO:X G</b>	<b>(JAPAN model Only)</b>	<b>MSAAC+NEO:X G&lt;CR&gt;</b>

<i>EVENT</i>	<i>PARAMETER</i>	function	example
MS	AUDYSSEY DSX		MSAUDYSSEY DSX<CR>
	<b>PL2X C DSX</b>		<b>MSPL2X C DSX&lt;CR&gt;</b>
	<b>PL2X M DSX</b>		<b>MSPL2X M DSX&lt;CR&gt;</b>
	<b>PL2X G DSX</b>		<b>MSPL2X G DSX&lt;CR&gt;</b>
	PL2 C DSX		MSPL2 C DSX<CR>
	PL2 M DSX		MSPL2 M DSX<CR>
	PL2 G DSX		MSPL2 G DSX<CR>
	QUICK1	QUICK SELECT mode change	MSQUICK1<CR>
	QUICK2		MSQUICK2<CR>
	QUICK3		MSQUICK3<CR>
	QUICK4		MSQUICK4<CR>
	QUICK5		MSQUICK5<CR>
	QUICK0	---QUICK 1(or 2, 3, 4, 5) Change QUICK SELECT OFF	MSQUICK0<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example	
VS	MONIAUTO	HDMI MONITOR setting change	VSMONIAUTO<CR>	
	MONI1		VSMONI1<CR>	
	MONI2		VSMONI2<CR>	
	ASPNRM	ASPECT setting change	VSASPNRM<CR>	
	ASPFUL		VSASPFUL<CR>	
	SC48P	Resolution(analog) setting change	VSSC48P<CR>	
	SC10I		VSSC10I<CR>	
	SC72P		VSSC72P<CR>	
	SC10P		VSSC10P<CR>	
	SC10P24		VSSC10P24<CR>	
	<b>SC4K</b>		<b>VSSC4K&lt;CR&gt;</b>	
	SCAUTO		VSSCAUTO<CR>	
	SCH48P		Resolution(HDMI) setting change	VSSCH48P<CR>
	SCH10I			VSSCH10I<CR>
	SCH72P			VSSCH72P<CR>
	SCH10P			VSSCH10P<CR>
	SCH10P24	VSSCH10P24<CR>		
	<b>SCH4K</b>	<b>VSSCH4K&lt;CR&gt;</b>		
	SCHAUTO	VSSCHAUTO<CR>		
	AUDIO AMP	HDMI AUDIO Output setting change	VSAUDIO AMP<CR>	
	AUDIO TV		VSAUDIO TV<CR>	
	VPMAUTO	Video Mode setting change	VSVPMAUTO<CR>	
	VPMGAME		VSVPMGAME<CR>	
	VPMMOVI		VSVPMMOVI<CR>	
	VST ON	VERTICAL STRETCH setting change	VSVST ON<CR>	
	VST OFF		VSVST OFF<CR>	

<b>EVENT</b>	<b>PARAMETER</b>	function	example
PS	TONE CTRL OFF	TONE CONTROL ON/OFF change	PSTONE CTRL OFF<CR>
	TONE CTRL ON		PSTONE CTRL OFF<CR>
	CINEMA EQ.ON	CINEMA EQ. ON/OFF change	PSCINEMA EQ.ON<CR>
	CINEMA EQ.OFF		PSCINEMA EQ.OFF<CR>
	MODE:CINEMA	CINEMA / MUSIC / GAME / HEIGHT mode change	PSMODE:CINEMA<CR>
	MODE:MUSIC		PSMODE:MUSIC<CR>
	MODE:GAME		PSMODE:GAME<CR>
	MODE:HEIGHT		PSMODE:HEIGHT<CR>
	<b>LOM ON</b>	<b>Loudness Management ON/OFF change</b>	<b>PSLOM ON&lt;CR&gt;</b>
	<b>LOM OFF</b>		<b>PSLOM OFF&lt;CR&gt;</b>
	PHG LOW	PL II z HEIGHT GAIN change	PSPHG LOW<CR>
	PHG MID		PSPHG MID<CR>
	PHG HI		PSPHG HI<CR>
	SP:FH	Speaker Output setting	PSSP:FH<CR>
	SP:FW		PSSP:FW<CR>
	SP:SB		PSSP:SB<CR>
	<b>SP:HW</b>		<b>PSSP:HW&lt;CR&gt;</b>
	<b>SP:BH</b>		<b>PSSP:BH&lt;CR&gt;</b>
	<b>SP:BW</b>		<b>PSSP:BW&lt;CR&gt;</b>
	SP:OFF		PSSP:OFF<CR>
	MULTEQ:AUDYSSEY		MultEQ XT 32 mode change
	MULTEQ:BYP.LR	PSMULTEQ:BYP.LR<CR>	
	MULTEQ:FLAT	PSMULTEQ:FLAT<CR>	
	MULTEQ:MANUAL	PSMULTEQ:MANUAL<CR>	
	MULTEQ:OFF	PSMULTEQ:OFF<CR>	
	DYNEQ ON	DYNAMIC EQ ON/OFF change	PSDYNEQ ON<CR>
	DYNEQ OFF		PSDYNEQ OFF<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
PS	REFLEV 0	Reference Level Offset change	PSREFLEV 0<CR>
	REFLEV 5		PSREFLEV 5<CR>
	REFLEV 10		PSREFLEV 10<CR>
	REFLEV 15		PSREFLEV 15<CR>
	<b>DYNVOL HEV</b>	DYNAMIC VOLUME change	<b>PSDYNVOL HEV&lt;CR&gt;</b>
	<b>DYNVOL MED</b>		<b>PSDYNVOL MED&lt;CR&gt;</b>
	<b>DYNVOL LIT</b>		<b>PSDYNVOL LIT&lt;CR&gt;</b>
	<b>DYNVOL OFF</b>		<b>PSDYNVOL OFF&lt;CR&gt;</b>
	<b>LFC ON</b>	<b>Audyssey LFC change</b>	<b>PSLFC ON&lt;CR&gt;</b>
	<b>LFC OFF</b>		<b>PSLFC OFF&lt;CR&gt;</b>
	<b>CNTAMT **</b>	<b>Containment Amount change</b>	<b>PSCNTAMT 07&lt;CR&gt;</b>
	<b>DSX ONHW</b>	Audyssey DSX change	<b>PSDSX ONHW&lt;CR&gt;</b>
	DSX ONH		PSDSX ONH<CR>
	DSX ONW		PSDSX ONW<CR>
	DSX OFF		PSDSX OFF<CR>
	STW **	STAGE WIDTH change	PSSTW 50<CR>
	STH **	STAGE HEIGHT change	PSSTH 50<CR>
	BAS **	BASS change	PSBAS 50<CR>
	TRE **	TREBLE change	PSTRE 50<CR>
	BAS **	BASS change	PSBAS 50<CR>
	TRE **	TREBLE change	PSTRE 50<CR>
	DRC AUTO	Dynamic Compression change	PSDRC AUTO<CR>
	DRC LOW		PSDRC LOW<CR>
	DRC MID		PSDRC MID<CR>
	DRC HI		PSDRC HI<CR>
	DRC OFF		PSDRC OFF<CR>
	<b>BSC **</b>	<b>Bass Sync change</b>	<b>PSBSC 16&lt;CR&gt;</b>
	<b>DEH OFF</b>	<b>Dialogue Enhancer change</b>	<b>PSDEH OFF&lt;CR&gt;</b>
	<b>DEH LOW</b>		<b>PSDEH LOW&lt;CR&gt;</b>
	<b>DEH MED</b>		<b>PSDEH MED&lt;CR&gt;</b>
	<b>DEH HIGH</b>		<b>PSDEH HIGH&lt;CR&gt;</b>

<b>EVENT</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
PS	LFE **	LFE change	PSLFE 10<CR>
	<b>LFL 00</b>	<b>LFE Level change</b> (When the Input Mode is "EXTERNAL IN" mode only)	<b>PSLFL 00&lt;CR&gt;</b>
	<b>LFL 05</b>		<b>PSLFL 05&lt;CR&gt;</b>
	<b>LFL 10</b>		<b>PSLFL 10&lt;CR&gt;</b>
	<b>LFL 15</b>		<b>PSLFL 15&lt;CR&gt;</b>
	<b>EFF ON</b>		<b>EFFECT ON/OFF change</b>
	<b>EFF OFF</b>	<b>PSEFF OFF&lt;CR&gt;</b>	
	EFF **	EFFECT LEVEL change	PSEFF 10<CR>
	DEL ***	DELAY change	PSDEL 100<CR>
	PAN ON	PANORAMA ON/OFF change	PSPAN ON<CR>
	PAN OFF		PSPAN OFF<CR>
	DIM **	DIMENSION change	PSDIM 06<CR>
	CEN **	CENTER WIDTH change	PSCEN 07<CR>
	<b>CEG **</b>	<b>CENTER GAIN change</b>	<b>PSCEG 10&lt;CR&gt;</b>
	SWR ON	SW ON/OFF change	PSSWR ON<CR>
	SWR OFF		PSSWR OFF<CR>
	RSZ S	ROOM SIZE change	PSRSZ S<CR>
	RSZ MS		PSRSZ MS<CR>
	RSZ M		PSRSZ M<CR>
	RSZ ML		PSRSZ ML<CR>
	RSZ L		PSRSZ L<CR>
	DELAY ***		AUDIO DELAY change
	RSTR OFF	AUDIO RESTORER change	PSRSTR OFF<CR>
	RSTR MODE1		PSRSTR MODE1<CR>
	RSTR MODE2		PSRSTR MODE2<CR>
	RSTR MODE3		PSRSTR MODE3<CR>
	FRONT SPA	FRONT SPEAKER direct change	PSFRONT SPA<CR>
	FRONT SPB		PSFRONT SPB<CR>
	FRONT SPA+B		PSFRONT A+B<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
PV	<b>OFF</b>	Picture Mode=OFF	PVOFF<CR>
	<b>STD</b>	Picture Mode=STANDARD	PVSTD<CR>
	<b>MOV</b>	Picture Mode=MOVIE	PVMOV<CR>
	<b>VVD</b>	Picture Mode=VIVID	PVVVD<CR>
	<b>STM</b>	Picture Mode=STREAM	PVSTM<CR>
	<b>CTM</b>	Picture Mode=CUSTOM	PVCTM<CR>
	CN **	CONTRAST change	PVCN 50<CR>
	BR **	BRIGHTNESS Change	PVBR 12<CR>
	CM **	CROMA LEVEL change	PVCM 50<CR>
	HUE **	Hue Change	PVHUE 50<CR>
	DNR OFF	DNR change	PVDNR OFF<CR>
	DNR LOW		PVDNR LOW<CR>
	DNR MID		PVDNR MID<CR>
	DNR HI		PVDNR HI<CR>
	ENH **	ENHANCER change	PVENH 12<CR>

<b>EVENT</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
Z2	PHONO   USB DIRECT IPOD DIRECT	ZONE2 source change ---The name of PARAMETER is the same as that of the time of SI COMMAND.	Z2PHONO<CR>   Z2USB DIRECT<CR> Z2IPOD DIRECT<CR>
	SOURCE	ZONE2 mode cancel	Z2SOURCE<CR>
	QUICK1	ZONE2 QUICK SELECT mode change	Z2QUICK1<CR>
	QUICK2		Z2QUICK2<CR>
	QUICK3		Z2QUICK3<CR>
	QUICK4		Z2QUICK4<CR>
	QUICK5		Z2QUICK5<CR>
	QUICK0	---Z2 QUICK SELECT 1(or 2, 3, 4, 5) Change QUICK SELCT OFF	Z2QUICK0<CR>
	<b>FAVORITE1</b>	ZONE2 FAVORITE STATION 1-4 MODE SELECT	<b>Z2FAVORITE1&lt;CR&gt;</b>
	<b>FAVORITE2</b>		<b>Z2FAVORITE2&lt;CR&gt;</b>
	<b>FAVORITE3</b>		<b>Z2FAVORITE3&lt;CR&gt;</b>
	<b>FAVORITE4</b>		<b>Z2FAVORITE4&lt;CR&gt;</b>
	<b>FAVORITE1 MEMORY</b>	ZONE2 FAVORITE STATION 1-4 MODE MEMORY	<b>Z2FAVORITE1 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE2 MEMORY</b>		<b>Z2FAVORITE2 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE3 MEMORY</b>		<b>Z2FAVORITE3 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE4 MEMORY</b>		<b>Z2FAVORITE4 MEMORY&lt;CR&gt;</b>
	**	ZONE2 VOLUME change , **:00 to 98 by ASCII 98 = 18dB (MAX) 80 = 00dB 01 = -79dB 00 = --- (MIN)	Z280<CR>
ON	ZONE2 ON/OFF change	Z2ON<CR>	
OFF		Z2OFF<CR>	
Z2MU	ON	ZONE2 OUTPUT MUTE ON/OFF change	Z2MUON<CR>
	OFF		Z2MUOFF<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
Z2CS	ST	ZONE2 Channel setting	Z2CSST<CR>
	MONO		Z2CSMONO<CR>
Z2CV	FL **	** : 38 to 62 by ASCII , 50=0dB	Z2CVFL 50<CR>
	FR **	** : 38 to 62 by ASCII , 50=0dB	Z2CVFR 50<CR>
Z2HPF	ON	ZONE2 HPF ON/OFF change	Z2HPFON<CR>
	OFF		Z2HPFOFF<CR>
Z2PS	BAS **	ZONE2 BASS change	Z2PSBAS 50<CR>
	TRE **	ZONE2 TEBLE change	Z2PSTRE 50<CR>

<b>EVENT</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
Z3	PHONO   USB DIRECT IPOD DIRECT	ZONE3 source change ---The name of PARAMETER is the same as that of the time of SI COMMAND.	Z3PHONO<CR>   Z3USB DIRECT<CR> Z3IPOD DIRECT<CR>
	SOURCE	ZONE3 mode cancel	Z3SOURCE<CR>
	QUICK1	ZONE3 QUICK SELECT mode change	Z3QUICK1<CR>
	QUICK2		Z3QUICK2<CR>
	QUICK3		Z3QUICK3<CR>
	QUICK4		Z3QUICK4<CR>
	QUICK5		Z3QUICK5<CR>
	QUICK0	---Z3 QUICK SELECT 1(or 2, 3, 4, 5) Change QUICK SELCT OFF	Z3QUICK0<CR>
	<b>FAVORITE1</b>	ZONE3 FAVORITE STATION 1-4 MODE SELECT	<b>Z3FAVORITE1&lt;CR&gt;</b>
	<b>FAVORITE2</b>		<b>Z3FAVORITE2&lt;CR&gt;</b>
	<b>FAVORITE3</b>		<b>Z3FAVORITE3&lt;CR&gt;</b>
	<b>FAVORITE4</b>		<b>Z3FAVORITE4&lt;CR&gt;</b>
	<b>FAVORITE1 MEMORY</b>	ZONE3 FAVORITE STATION 1-4 MODE MEMORY	<b>Z3FAVORITE1 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE2 MEMORY</b>		<b>Z3FAVORITE2 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE3 MEMORY</b>		<b>Z3FAVORITE3 MEMORY&lt;CR&gt;</b>
	<b>FAVORITE4 MEMORY</b>		<b>Z3FAVORITE4 MEMORY&lt;CR&gt;</b>
	**	ZONE3 VOLUME change , **:00 to 98 by ASCII 98 = 18dB (MAX) 80 = 00dB 01 = -79dB 00 = --- (MIN)	Z380<CR>
ON	ZONE3 ON/OFF change	Z3ON<CR>	
OFF		Z3OFF<CR>	
Z3MU	ON	ZONE3 OUTPUT MUTE ON/OFF change	Z3MUON<CR>
	OFF		Z3MUOFF<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
Z3CS	ST	ZONE3 Channel setting	Z3CSST<CR>
	MONO		Z3CSMONO<CR>
Z3CV	FL **	** : 38 to 62 by ASCII , 50=0dB	Z3CVFL 50<CR>
	FR **	** : 38 to 62 by ASCII , 50=0dB	Z3CVFR 50<CR>
Z3HPF	ON	ZONE3 HPF ON/OFF change	Z3HPFON<CR>
	OFF		Z3HPFOFF<CR>
Z3PS	BAS **	ZONE3 BASS change	Z3PSBAS 50<CR>
	TRE **	ZONE3 TEBLE change	Z3PSTRE 50<CR>

## ※ANALOG TUNER Control

<i>EVENT</i>	<i>PARAMETER</i>	function	example
TF	AN***** (6 digits)	TUNER Frequency change  --- ****.** MHz at FM band	TFAN008750<CR> (87.50MHz at FM)
TP	AN**(PRESET No.)	TUNER PRESET change to No.** <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPAN01&lt;CR&gt;</b> <b>(PRESET No."01")</b>
	ANOFF	Change Preset Channel select OFF	TPANOFF<CR>
	ANMEM**	TUNER PRESET MEMORY <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPANMEM01&lt;CR&gt;</b>
TM	ANAUTO	---Tuning mode set to AUTO mode	TMANAUTO<CR>
	ANMANUAL	---Tuning mode set to MANUAL mode	TMANMANUAL<CR>

※HD RADIO Control (AVR-4520CI North America model only)

EVENT	PARAMETER	function	example
TF	HD***** (6 digits)	--- ****.* kHz at AM band (>050000 is AM.) ****.* MHz at FM band (<050000 is FM.)	TPHD105000<CR> (1050.00kHz at AM)
	HDMC*(1 digit)	---HD Multi Cast CH change (*:Multi Cast 1-8, Analog 0)	TFHDMC2<CR>
TP	HD**(PRESET No.)	HD RADIO PRESET change to No.** <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPHD01&lt;CR&gt;</b> <b>(PRESET No."01")</b>
	HDOFF	Change Preset Channel select OFF	TPHDOFF<CR>
	HDMEM**	<b>HDRADIO PRESET MEMORY</b> <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPHDMEM01&lt;CR&gt;</b>
TM	HDAM	HD RADIO BAND , MODE change ---Band set to AM	TMHDAM<CR>
	HDFM	---Band set to FM	TMHDFM<CR>
	HDAUTOHD	---Tuning mode set to AUTO-HD mode	TMHDAUTOHD<CR>
	HDAUTO	---Tuning mode set to AUTO mode	TMHDAUTO<CR>
	HDMANUAL	---Tuning mode set to MANUAL mode	TMHDMANUAL<CR>
	<b>HDANAAUTO</b>	<b>---Tuning mode set to ANALOG AUTO mode</b>	<b>TMHDANAAUTO&lt;CR&gt;</b>
	<b>HDANAMANU</b>	<b>---Tuning mode set to ANALOG AUTO MANUAL mode</b>	<b>TMHDANAMANU&lt;CR&gt;</b>
HD	ST NAME(8 digits)	HD STATION NAME change	HDST NAME *****<CR>
	STL NAME (56 digits)	HD STATION LONG NAME change	HDSTL NAME (56 digits)<CR>
	SIG LEV * (1 digit)	HD ANTENNA SIGNAL STATUS change	HDSIG LEV 0<CR>
			HDSIG LEV 1<CR>
			HDSIG LEV 2<CR>
			HDSIG LEV 3<CR>
			HDSIG LEV 4<CR>
HDSIG LEV 5<CR>			
HDSIG LEV 6<CR>			
MLT CURRCH * (1 digit)	HD MULTI CAST CURRENT CH change	HDMLT CURRCH *<CR>	
MLT CAST CH (1 digits)	HD MULTI CAST CH NUMBER	HDMLT CAST CH *<CR>	

<b>EVENT</b>	<b>PARAMETER</b>	function	example
HD	PTY(18 digits)	HD PROGRAM TYPE change	HDPTY (18 digits)<CR>
	ARTIST(40 digits)	HD ARTIST NAME change	HDARTIST (40 digits)<CR>
	TITLE(40 digits)	HD TITLE NAME change	HDTITLE (40 digits)<CR>
	ALBUM(40 digits)	HD ALBUM NAME change	HDALBUM (40 digits)<CR>
	GENRE(23 digits)	HD GANRE change	HDGENRE (23 digits)<CR>
	MODE	HD MODE (ANALOG/DIGITAL)	HDMODE DIGITAL<CR> HDMODE ANALOG<CR>

※Network Audio/USB /iPod DIRECT Extended Control

EVENT	PARAMETER	function	example
NSA		Onscreen Display Information is Answered By the NSA Command.	
	0	Display Line1 Information	NSA0*****<CR>
	1	Display Line3 Information	NSA1※*****<CR>
	2	Display Line4 Information	NSA2※*****<CR>
	3	Display Line5 Information	NSA3※*****<CR>
	4	Display Line6 Information	NSA4※*****<CR>
	5	Display Line7 Information	NSA5※*****<CR>
	6	Display Line8 Information	NSA6※*****<CR>
	7	Display Line9 Information	NSA7*****<CR>
	8	Display Line10 Information	NSA8*****<CR> *:Character Length MAX96byte _:Null ?:Exclusion (The character after Null should be disregarded) ※:Cursor&Playable Information Data (1Byte) Bit1:Playable Music Bit2:Directory Bit4:CURSOR SELECT=1 Bit7:Picture Bit3,5,6,8:Don't Care
		NSA0Now Playing USB_<CR> NSA1※Come Away With Me_<CR> NSA2※Norah Jones_<CR> NSA3※_<CR> NSA4※_<CR> NSA5※00:11 100%_<CR> NSA6※_<CR> NSA7_<CR> NSA8 <CR>	

<b>EVENT</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
NSE		Onscreen Display Information (mServer/iRadio) is Answered By the NSE Command.	
	0	Display Line1 Information	NSE0***** <CR>
	1	Display Line3 Information	NSE1※***** <CR>
	2	Display Line4 Information	NSE2※***** <CR>
	3	Display Line5 Information	NSE3※***** <CR>
	4	Display Line6 Information	NSE4※***** <CR>
	5	Display Line7 Information	NSE5※***** <CR>
	6	Display Line8 Information	NSE6※***** <CR>
	7	Display Line9 Information	NSE7***** <CR>
	8	Display Line10 Information	NSE8***** <CR> *:UTF-8 CODE Character (MAX96byte) _:Null ?: Don't Care (The character after Null should be disregarded) ※:Cursor&Playable Information Data (1Byte) Bit1: Playable Music =1 Bit2: Directory Bit4: CURSOR SELECT=1 Bit7: Picture Bit3,5,6,8: Don't Care ***** <CR>:96byte Fixed
			<example> NSE0 Now Playing USB_ <CR> NSE1※ Come Away With Me_ <CR> NSE2※ Norah Jones_ <CR> NSE3※_ <CR> NSE4※_ <CR> NSE5※ 00:11 100%_ <CR> NSE6※_ <CR> NSE7_ <CR> NSE8 <CR>

<i>COMMAND</i>	<i>PARAMETER</i>	function	example
NS	B** (PRESET No.)	Preset Call ** : 00-55 00=CH01,55=CH56	NSB00<CR>
	C** (PRESET No.)	Preset Memory, Preset stored at No.** ** : 00-55 00=CH01,55=CH56	NSC00<CR>
	H	Return Preset Channel CH1-CH56 status (UTF-8) ** : 00-55 00=CH01,55=CH56	NSH0***** (20 digits)<CR> NSH01***** (20 digits)<CR>   NSH54***** (20 digits)<CR> NSH55***** (20 digits)<CR>

### ✳️Cursor/Enter/Setup Menu

COMMAND	PARAMETER	function	example
MN	MEN ON	"Setup Menu ON" Control	MNMEN ON<CR>
	MEN OFF	"Setup Menu OFF" Control	MNMEN OFF<CR>
	PRV ON	"InstaPrevue ON" Control	MNPRV ON<CR>
	PRV OFF	"InstaPrevue OFF" Control	MNPRV OFF<CR>
	ZST ON	"All Zone Stereo ON" Control	MNZST ON<CR>
	ZST OFF	"All Zone Stereo OFF" Control	MNZST OFF<CR>

### ✳️TRIGGER CONTROL

EVENT	PARAMETER	function	example
TR	1 ON	Trigger 1 ON	TR1 ON<CR>
	1 OFF	Trigger 1 OFF	TR1 OFF<CR>
	2 ON	Trigger 2 ON	TR2 ON<CR>
	2 OFF	Trigger 2 OFF	TR2 OFF<CR>

### ✳️Remote Lock/Panel Lock

EVENT	PARAMETER	function	example
SY	REMOTE LOCK ON	REMOTE CONTROL LOCK ON/OFF	SYREMOTE LOCK ON<CR>
	REMOTE LOCK OFF		SYREMOTE LOCK OFF<CR>
	PANEL LOCK ON	PANEL BUTTON (Except MASTER VOL.) CONTROL LOCK ON	SYPANEL LOCK ON<CR>
	PANEL+V LOCK ON	PANEL BUTTON & MASTER VOL. CONTROL LOCK ON	SYPANEL+V LOCK ON<CR>
	PANEL LOCK OFF	PANEL BUTTUM & MASTER VOL. CONTROL LOCK OFF	SYPANEL LOCK OFF<CR>

### ✳️UPGRADE ID Display

COMMAND	PARAMETER	function	example
UG	IDN *****	ID Number for UPGRADE is displayed on FL Display *****:12-digit ID Number	UGIDN *****<CR>
	IDN NG	Can't get ID number from DPMS	UGIDN NG<CR>

## Extension COMMAND

· The RC code can be sent from Serial protocol commands

### Protocol specification

**Command structure:** COMMAND + RC FORMAT + RC DATA + CR (0x0D)

COMMAND : ASCII CODE of 2 characters

Ex. RC : RC CODE

RC FORMAT : ASCII CODE of 3 characters

Ex. **KSK** : KASEIKYO FORMAT

**SHP** : SHARP FORMAT

RC DATA : ASCII CODE of 7 characters

※For details of the RC CODE , please refer to the IR remote control code list.

#### KASEIKYO FORMAT

REMOTE ID SET : 1

No.	K4-1 : MAIN ZONE																				Key Name						
	GENRE2				Data										ID		parity										
	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48			
RCKSK0410002	1	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	1	1	0	ALL POWER ON
RCKSK0410003					1	1	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	1	1	1	0	ALL POWER OFF
RCKSK0410006					0	1	1	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	1	0	0	MAIN ZONE ON
RCKSK0410007					1	1	1	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	1	1	0	0	MAIN ZONE OFF

#### SHARP FORMAT

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0230032	000001	ENTER	RCSHP0230048	000011	MUTING
RCSHP0230033	100001	POWER ON	RCSHP0230049	100011	MASTER VOLUME UP
RCSHP0230034	010001	POWER OFF	RCSHP0230050	010011	MASTER VOLUME DOWN
RCSHP0230035	110001	DVD	RCSHP0230051	110011	SL LEVEL UP
RCSHP0230036	001001	STANDARD(DOLBY/DTS SURR.)	RCSHP0230052	001011	SL LEVEL DOWN
RCSHP0230037	101001	SL LEVEL DOWN	RCSHP0230053	101011	CENTER LEVEL UP

**The example of a command** \* <CR> is the meaning of 0x0D.

RCKSK0410002<CR> : All Power ON by using KASEIKYO FORMAT

RCSHP0230033<CR> : All Power ON by using SHARP FORMAT